1175 Wheel Balancer




Parts Identification

READ these instructions before placing unit in service KEEP these and other materials delivered with the unit in a binder near the machine for ease of reference by supervisors and operators.


Parts Identification

The following pages include parts breakdowns with exploded view illustrations to help with ordering replacement or spare kits. Assemblies are noted where it is recommended that individual parts not be ordered separately. Every effort is made to supply accurate exploded views, however, due to interim changes in manufacturing operations, some units may not be exactly as illustrated.

Chassis Assembly

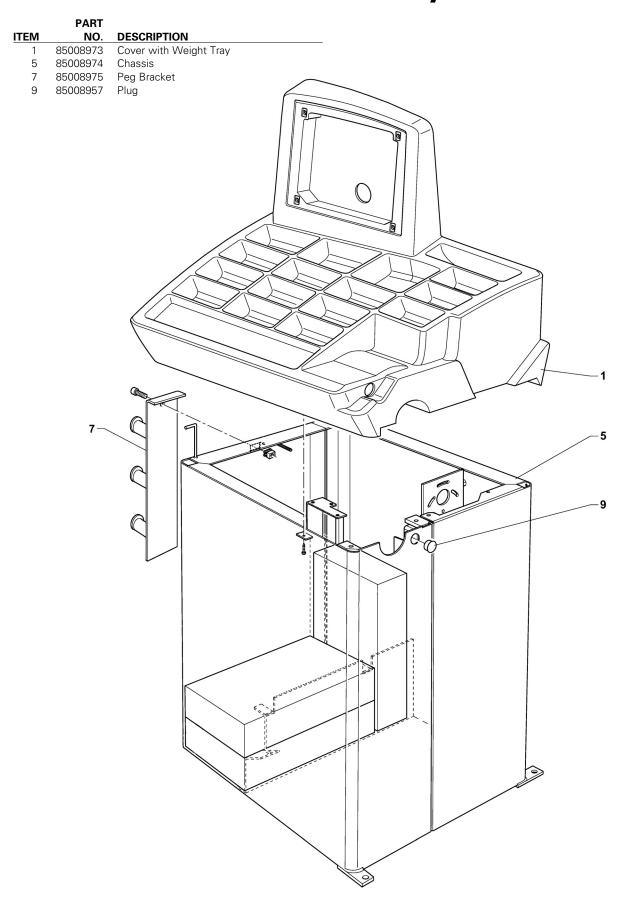


Motor & Piezo Assembly

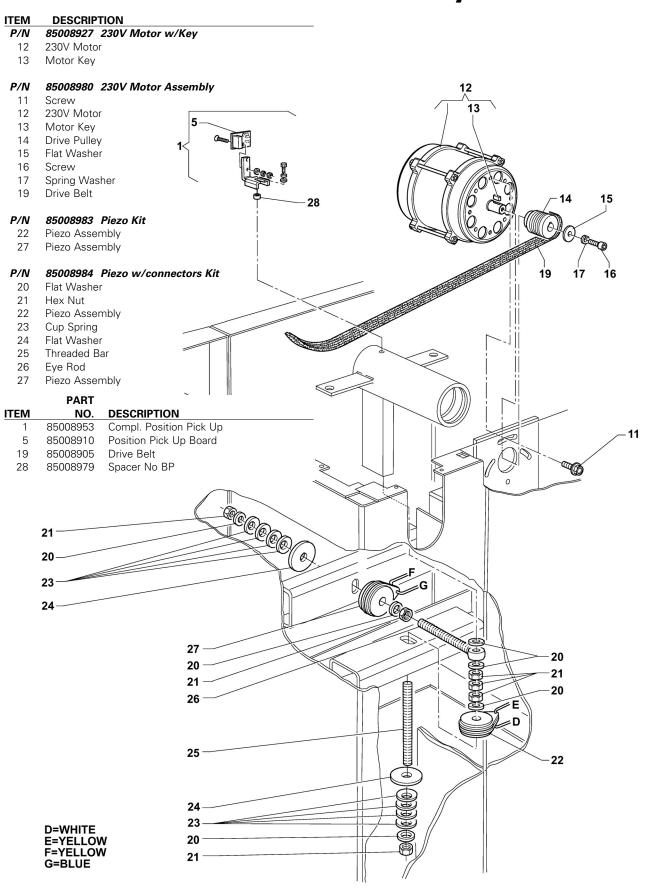

Shaft Assembly

	PART	
ITEM	NO.	DESCRIPTION
4	85008949	Drive Pulley
5	85008950	Encoder Phase Disc
7	85008914	Bearing
8	85008976	Leaf Spring Set
9	8110241	Weight Position Decal
16	85009009	40mm Shaft
18	85008951	Spring Cover
19	85008915	Spring Shaft Assembly

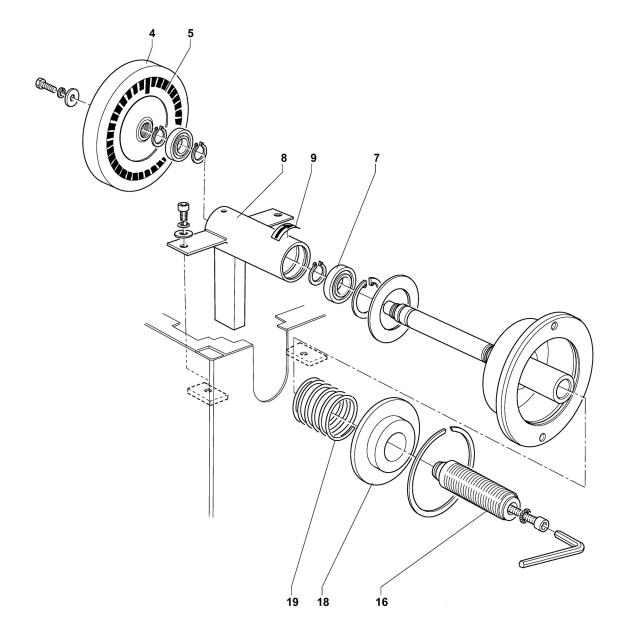

Touch Panel Assembly

PART

DESCRIPTION


Motor Key

Drive Pulley


Flat Washer

Screw



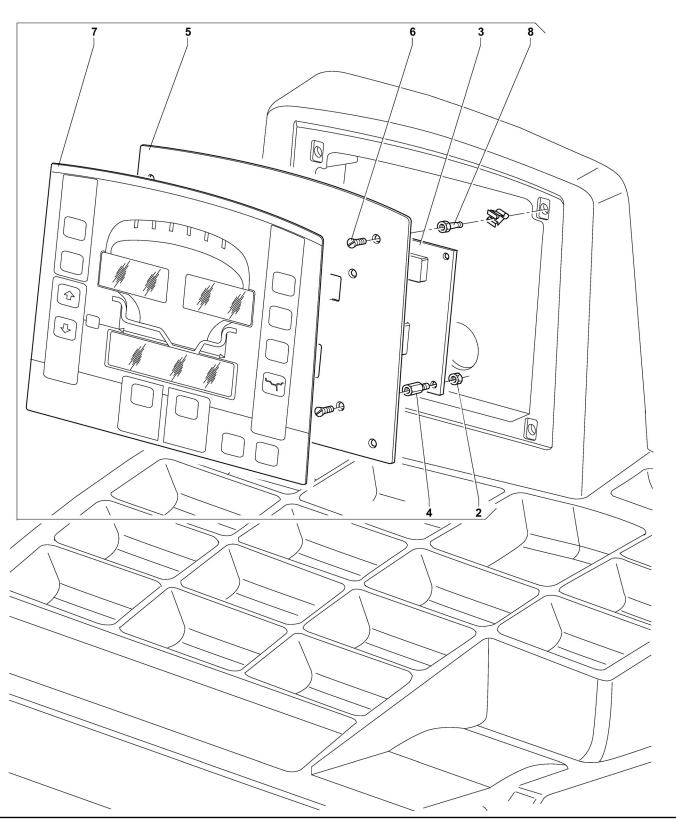


Distance Guage

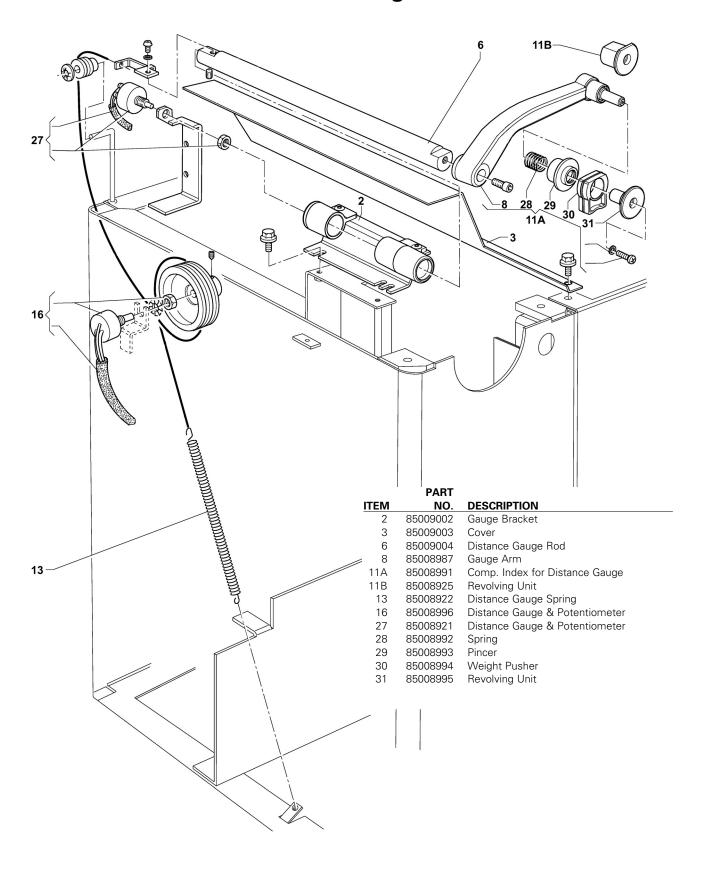


Power Panel

	PART	
ITEM	NO.	DESCRIPTION
3	85009005	Power Plate Kit
6	85008929	Power Supply Board 230V
8	85008928	Capacitor 230V
9	85009001	Cable Circlip
*	85008947	RC Filter/Snubber

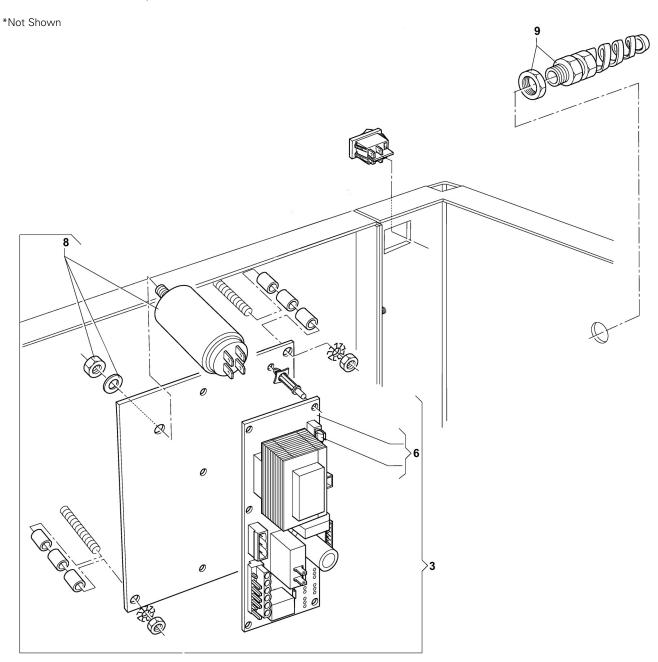

Wheel Guard

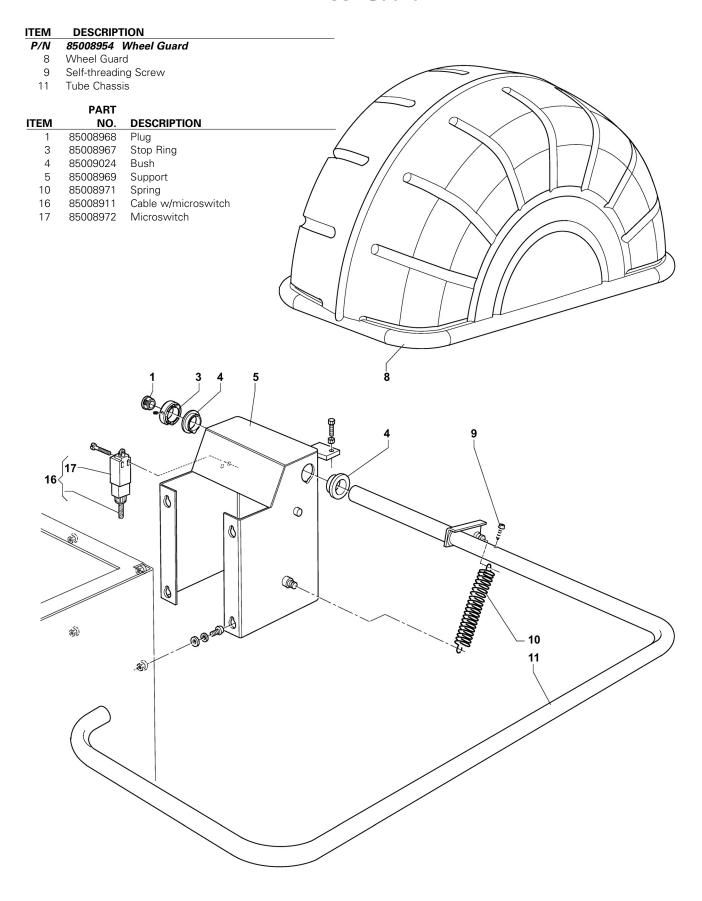

Harnesses

	PART	
ITEM	NO.	DESCRIPTION
*	85008908	Hood Switch Harness
*	85008919	Encoder Cable
*	85008923	Display Power Ribbon
*	85008926	Ground Cable For Display
*	85009007	Power Cord from Wall, 1175
*	85009008	Cord from Switch to MCB
*	85009025	Piezo/Display Cable

^{*}Not Shown

